

UNLOADING THE GRADER

Always use a guide when unloading the machine.

Ensure the float is parked on level ground and in a safe place to enable unloading to take place without danger to equipment or personnel

Position the float away from corners or over the crest of a hill where approaching traffic has little time to react to the situation

Place warning signs well in advance of the unloading area, and have flashing lights operating.

Lift the blade and rippers to clear pivot point on the float and watch the guide at all times.

